

MODEL: 51000BRZ  
**ASSEMBLY INSTRUCTIONS**  
**READ AND SAVE THESE INSTRUCTIONS**

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

 
MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

**UNPACK THE FOUNTAIN**

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: BALL, PLATE, FOUNTAIN BODY, PUMP, TRANSFORMER AND A BAG OF RIVER STONES.


**FOUNTAIN ASSEMBLY**

1. PLACE BALL ONTO TOP OF THE PLATE AND TWIST THE BALL CLOCKWISE TO SECURE.

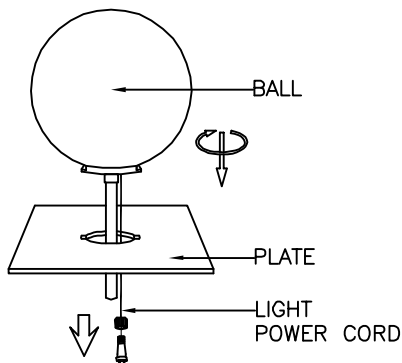


2. JOIN LIGHT CONNECTORS AND SCREW THE CAP TO CONNECTORS TIGHTLY TOGETHER.

 
3. ATTACH PUMP TO THE RUBBER HOSE.

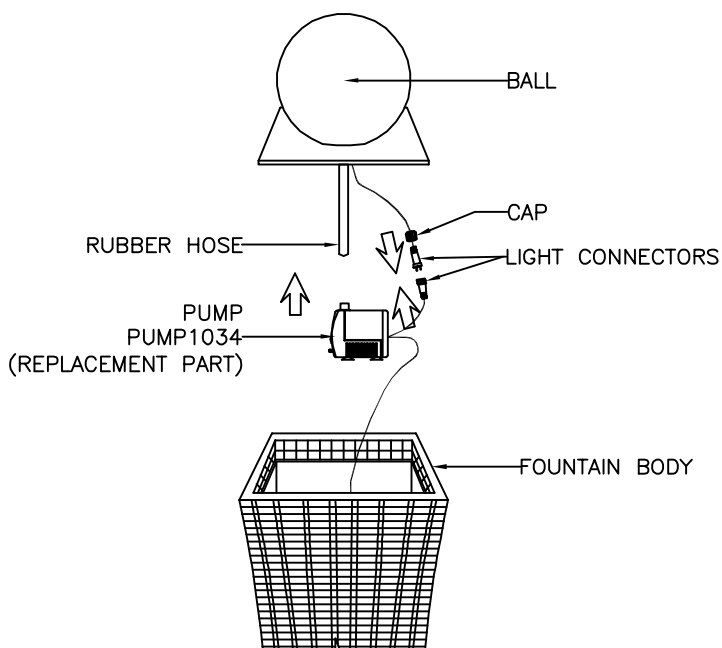

 4. PLACE THE PLATE WITH BALL INTO RESERVOIR.

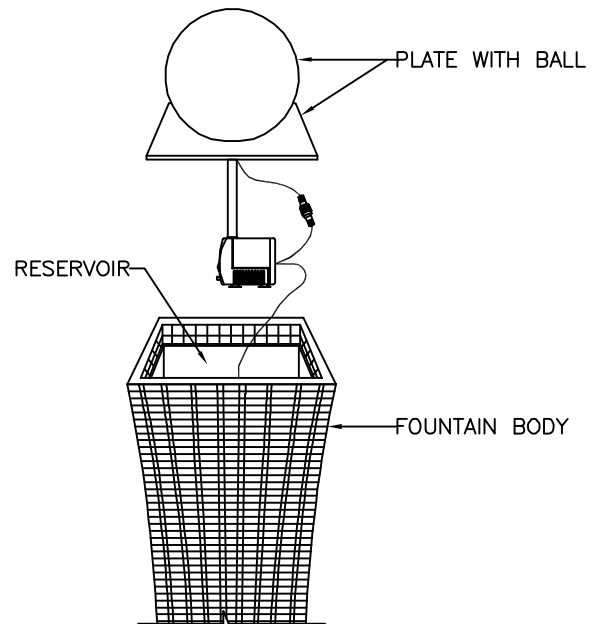

 5. PLACE DECORATIVE RIVER STONES ONTO TOP OF THE FOUNTAIN BODY.

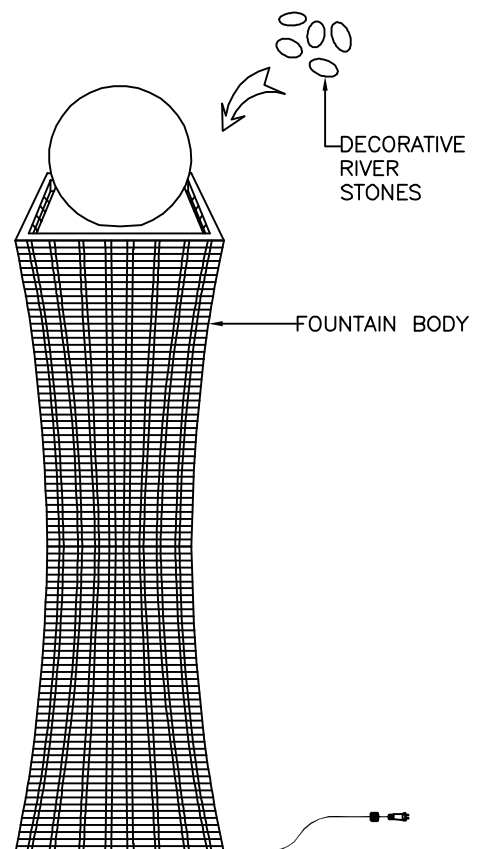


MODEL: 51000BRZ  
**ASSEMBLY INSTRUCTIONS**  
READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY

6. FILL RESERVOIR WITH 1.6 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.

 
**NOTE:** DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

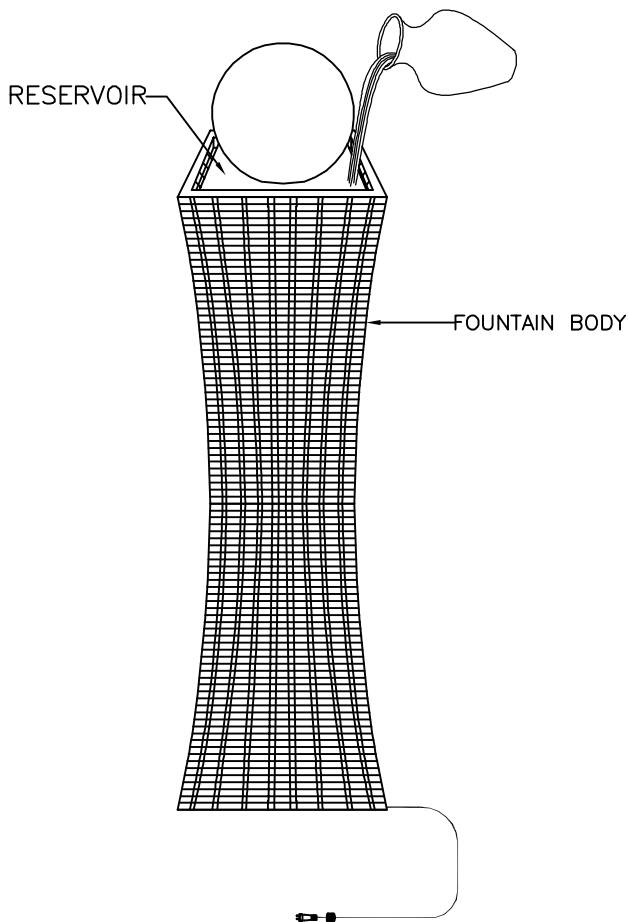

7. JOIN CONNECTORS AT TRANSFORMER AND SCREW THE CAP TO CONNECTOR TIGHTLY TOGETHER.

8. PLUG TRANSFORMER INTO OUTLET, THEN TEST WATER RUNNING, ADJUST THE WATER VALVE ON PUMP IF NEEDED.

 9. YOUR NEW FOUNTAIN IS READY FOR USE.

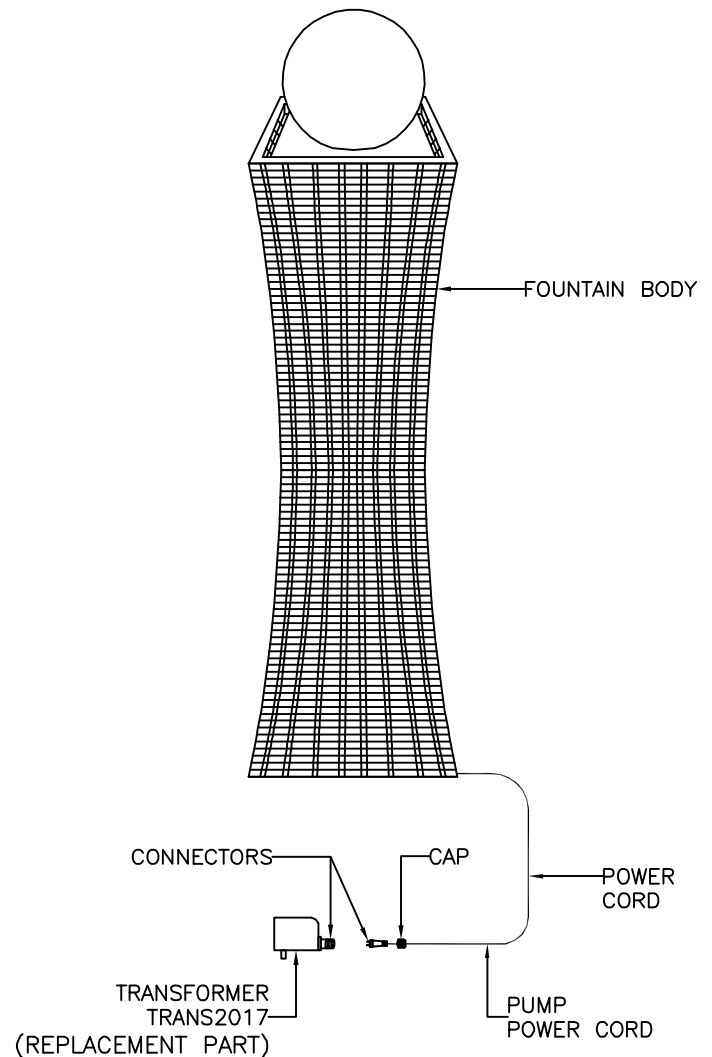

AVAILABLE PARTS ARE:  
PUMP1034 (PUMP)  
TRANS2017 (TRANSFORMER)

**TROUBLE SHOOTING:**

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

**SPLASHING DISCLAIMER:**

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

**IMPORTANT PUMP INFORMATION:**

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

**WATER:**

 
TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

**WARNING:**

\* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

\*\* THIS FOUNTAIN IS RATED FOR OUTDOOR USE.

\*\*\* THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

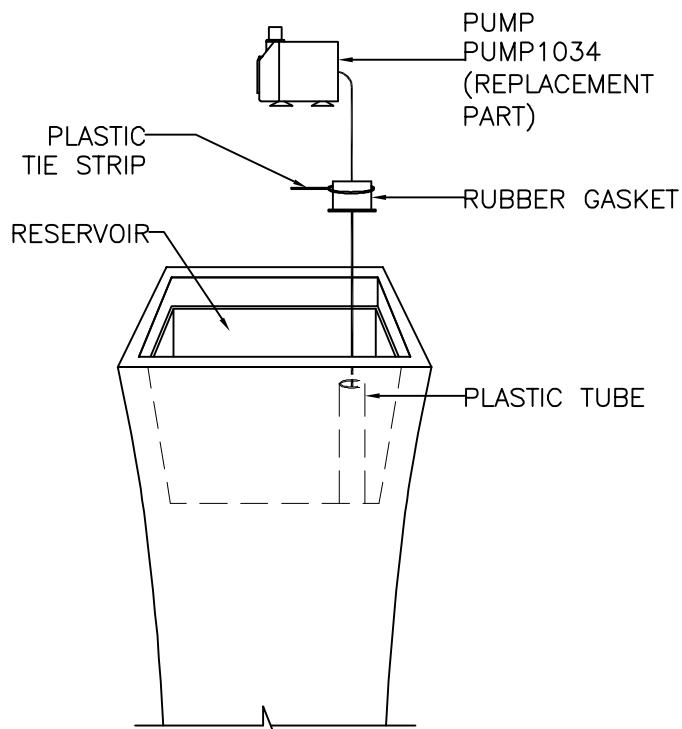**PUMP REPLACEMENT:**

1. UNPLUG THE FOUNTAIN.
2. DISASSEMBLE THE FOUNTAIN AS NECESSARY TO EXPOSE RESERVOIR.
3. REMOVE ALL WATER FROM RESERVOIR.
4. SNIP THE PLASTIC TIE STRIP.
5. PEEL BACK RUBBER GASKET FROM PLASTIC TUBE.
6. PULL OUT OLD PUMP FROM FOUNTAIN.
7. THREAD CORD FOR NEW PUMP THROUGH PLASTIC TUBE.
8. PLACE RUBBER GASKET OVER PLASTIC TUBE AND SECURE BY TIGHTENING A NEW PLASTIC TIE STRIP.
9. REASSEMBLE THE FOUNTAIN WITH NEW PUMP.